


GP-AMP terminals Instruction

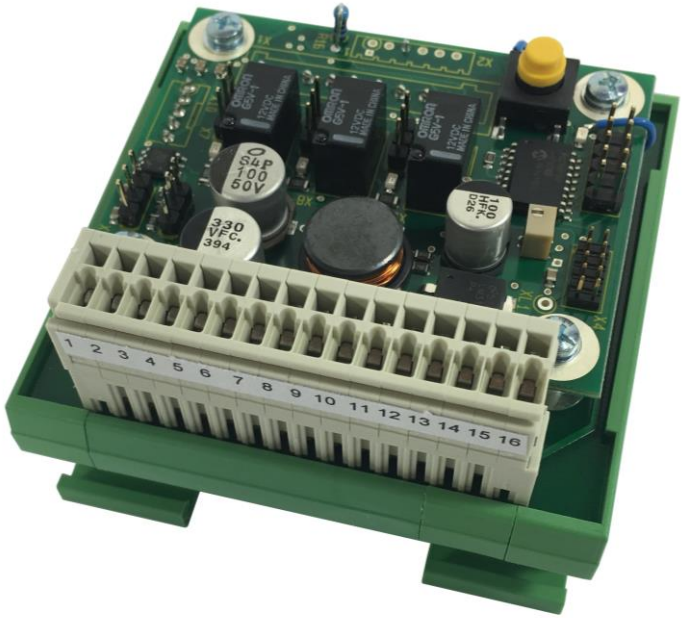

The GP-AMP amplifier unit for DIN rail mounting are used as control unit for detector GJ-EX, GJ-OX. GP-AMP must be, installed in safe area, where detector GJ-EX and GJ-OX are ATEX approved for installation in EX areas. The amplifier has three potential free relay outputs and analog output:

- Alarm 1 (low alarm)
- Alarm 2 (high alarm)
- Fault
- Analogue output 0-5V, 0-10V or 4-20 mA

Please refer to manual for GP-SA (EM03040E) for calibration.

